

dyna model maintenance schedule

item serviced	procedure	first service	5000	10,000	15,000	20,000	25,000
engine oil and filter	replace	X	X	X	X	X	X
oil lines and brake system	inspect for leaks	X	X	X	X	X	X
air cleaner	inspect, service as required	X	X	X	X	X	X
tires	check pressure, inspect tread	X	X	X	X	X	X
wheel spokes	check tightness	X	X			X	
primary chaincase lub.	replace	X		X		X	
transmission lubricant	replace	X				X	
clutch	check adjustment	X	X	X	X	X	X
primary chain	check adjustment	X	X	X	X	X	X
rear belt and sprockets	inspect, adjust belt	X	X	X	X	X	X
throttle, brake, choke, clutch	check, adjust and lubricate	X	X	X	X	X	X
jiffy stand	inspect and lubricate	X		X		X	
fuel lines and fittings	inspect for leaks	X	X	X	X	X	X
fuel tank filter screen	clean, (EFI, replace)						X
brake fluid	check levels and condion	X	X	X	X	X	X
brake pads and discs	inspect for wear	X	X	X	X	X	X
spark plugs	inspect	X	X		X		X
fuel tank filter screen	replace			X		X	
elect Equipment and switches	check operation	X	X	X	X	X	X
engine idle speed	check adjustment	X	X	X	X	X	X
front fork oil	replace					X	
steering head bearings	adjust and lubricate	X		X		X	
rear fork bearings			inspect every 30,000 miles				
primary chaincase bearings			replace every 15,000 miles				
windshield bushings	inspect			X		X	
steering head bearings	adjust	X		X		X	
engine mounts and stablizer links	inspect			X		X	
critical fasteners	check tightness	X		X		X	
battery	check battery and clean conn.						
road test	verify component and sys funct.	X	X	X	X	X	X