

softail maintenance schedule

item serviced	procedure	first service	5000	10,000	15,000	20,000	25,000
engine oil and filter	replace	X	X	X	X	X	X
oil lines and brake system	inspect for leaks	X	X	X	X	X	X
air cleaner	inspect, service as required	X	X	X	X	X	X
tires	check pressure, inspect tread	X	X	X	X	X	X
wheel spokes	check tightness	X	X			X	
primary chaincase lub.	replace	X	X	X		X	
transmission lubricant	replace	X	X			X	
clutch	check adjustment	X	X	X	X	X	X
primary chain	check adjustment	X	X	X	X	X	X
rear belt and sprockets	inspect, adjust belt	X	X	X	X	X	X
throttle, brake, choke, clutch	check, adjust and lubricate	X	X	X	X	X	X
jiffy stand	inspect and lubricate	X		X		X	
fuel valve, line, fittings	inspect for leaks	X	X	X	X	X	X
fuel tank filter screen	clean, (EFI, replace)						X
brake fluid	check levels and condition	X	X	X	X	X	X
brake pads and discs	inspect for wear	X	X	X	X	X	X
spark plugs	inspect	X	X		X		X
	replace			X		X	
electrical Equipment and switches	check operation	X	X	X	X	X	X
engine idle speed	check adjustment	X	X	X	X	X	X
front fork oil	replace					X	
steering head bearings	adjust	X		X		X	
(softail models)	lubricate			X		X	
steering head bearings		adjust and lubricate every 2500 miles					
(springer models)							
rear fork bearings						X	
(if applicable)							
windshield bushings	inspect			X		X	
springer rocker bearings	adjust	X		X		X	
fuel door, tour pac, saddlebags	lubricate hinges and latches	X	X	X	X	X	
critical fasteners	check tightness	X		X		X	
battery	check battery and clean conn.						
road test	verify component and sys funct.	X	X	X	X	X	X